


PARTS

- | | |
|------------------|------------------------|
| (A) MIRROR | (E) CROSS BRACE |
| (B) POSTS (2) | (F) HANDLES (2) |
| (C) LEGS (4) | (G) MACHINE SCREWS (4) |
| (D) END CAPS (2) | (H) WOOD PLUGS (4) |
| | (I) SPACERS (2) |

HARDWARE ILLUSTRATION

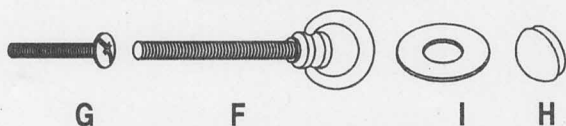


Tools required: Screwdriver (not included)

ATTENTION: SOME NUMBERED PARTS LISTED ON THE INSTRUCTION SHEET MAY NOT BE IN PARTS BAG AS THEY MAY ALREADY BE ASSEMBLED. CAREFULLY CHECK PARTS AND PACKING MATERIALS PRIOR TO ORDERING REPLACEMENTS.

Thank you for purchasing this Powell product. We want to make sure it is complete and to your satisfaction. Please check all packing material carefully for small parts which may have come loose inside the carton during shipment. Hardware can be identified by bright red packaging. Separate, identify, and count all parts and hardware to make sure they match with the illustrations herein and are all present. If any part(s) are missing or defective please contact Powell Customer Service. Contact information is given at the bottom of these instructions. If you feel the item is defective beyond a resolution with part replacements, please return this product with your receipt to the place of purchase. If purchased from an internet retailer, please contact their customer service department. Photo's and additional information may be requested to validate the claim. Product is not to be returned to the Powell Company under any circumstance unless authorized by the Powell Company or an authorized dealer or representative. Thank you.

IMPORTANT NOTE: Follow instructions listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

- Note:** Upon opening, thoroughly clean all wood surfaces with furniture polish to remove dust and dirt that may have settled onto finish during shipment. If you have residue from tape on the glass, use a warm damp washcloth to wet the surface and remove the residue.
- Slide Legs (C) into grooves on ends of Posts (B). Tighten End Caps (D) into ends of Posts (B) to secure Legs (C) in place.
- Insert Machine Screws (G) through holes near base of Posts (B) and tighten into ends of Cross Brace (E). Insert Wood Plugs (H) into screw holes.
- Push Handles (F) through Posts (B), Spacers (I) and tighten into Mirror sides (A). Remove tape from glass by holding Mirror frame (A) firmly and peeling tape slowly and gently away from glass. Avoid putting excessive pressure on Mirror (A) and observe the same care that you would take with any glass article.
- Your furniture has been handcrafted and skillfully finished by fine craftsmen. Rich, deep antique finishes have been applied which require very little polish. However, should you desire a shinier finish, simply use any good grade of furniture polish, rubbing the finish lightly as it is being applied. Allow to dry and buff lightly with a soft cloth.

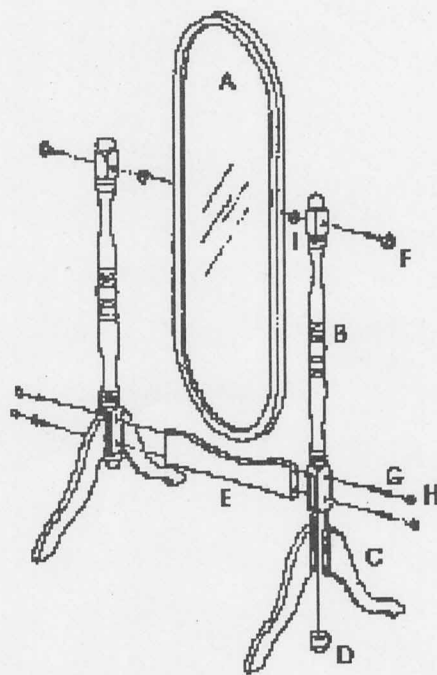

Should there be any missing or defective part(S), place your part

order on line at www.powellcompany.com, or fax this form to (310) 841-0842, or call Customer Service at (800) 622-4456.

PLEASE HAVE THE MODEL NUMBER, PART CODE AND FACTORY CODE IDENTIFIED

Part Letter _____	Quantity _____	Name _____
_____	_____	Address _____
_____	_____	City _____ State _____ Zip _____
Reason for replacement _____	_____	(No Post Office Box Addresses)
_____	_____	Best contact phone number (_____) _____
Place of purchase _____	_____	_____
Date of Purchase _____	_____	Factory Code (AK) _____

MODEL NO. 978T1 "HEIRLOOM CHERRY"
978T1 "NOSTALGIC OAK"